

Use and Maintenance

- SR1101B

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual



1. (If machine equipped with OBC) Disconnect the charger cable from the electrical main.



2. Make sure that there are no open doors/hoods and the hopper is properly closed.



3. Sit on the driver's seat.



4. Adjust the seat by using the lever. Use the lever to tilt the steering column to a comfortable position.



5. Turn the ignition key to "I" and do not press the pedal.



6. Disengage the parking brake by pressing the service brake pedal.



7. Drive the machine by keeping the hands on the steering wheel and pressing the pedal on the front side to move forward and on the rear side to move backward.



8. Lower the main broom with the right lever; it will start turning. Lower the side brooms with the left lever.



9. Turn on the vacuum system by pushing the switch backward.



10. To collect light and bulky waste materials, lift the front skirt by pressing the left pedal.



11. To clean the filter, turn on the filter shaker by pressing the switch forward for a few seconds.



12. Stop the machine by press the service brake pedal. Press the emergency push-button in case of emergency and to immediately stop the machine functions.




13. Turn off the machine by turn the ignition key to "0".



14. Remove the hopper by using the handle and by disengaging it from the inner guides. Discharge all the debris into special containers.



15. WEEKLY: Access to the filter compartment. Remove and clean the dust filter as indicated into the manual.

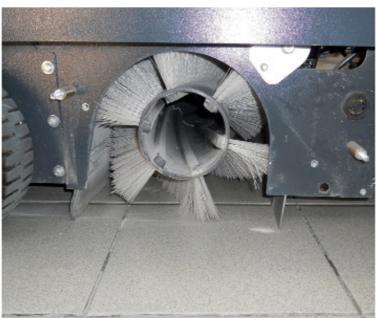

16. WEEKLY: Check the main and side brooms and remove any debris like straps, rope etc.



17. Clean the machine by using a damp cloth and where needed use a neutral cleaning product.



18. (If machine equipped with OBC) Connect the charger cable to the electrical main.



19. Park the machine into dry and clean storage area.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Troubleshooting

- SR1101B

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

The machine doesn't work as it should.



1. Check if the battery is charged.



2. Check if the main battery connector is properly connected.



3. Check if the parking brake pedal is disengaged.



4. Check the general fuse (F1) is not blown up.

The machine does not collect debris/dust



1. Check if all flaps is correctly adjusted and not worn out.



2. Check if the vacuum system switch is on.



3. Clean the panel filter by pressing the filter shaker switch.



4. Check if the hopper is full.




5. Check if the filter shaker fuse (F2) or the vacuum system fuse (F4) is not blown up.

The machine do not sweep.



1. Adjust the main broom position by the register knob.

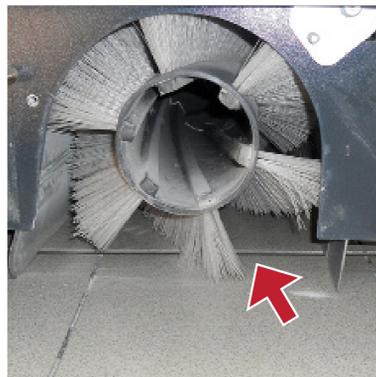

2. Access to the main broom compartment. Check or replace the broom if bristles are worn out.



3. Adjust the side broom position by the register knob. Replace the side broom if bristles are worn out.



4. Check if the main broom circuit breaker (FA) or the side brooms circuit breaker (FB) is not open.